



INSTALLING FITTING COVERS


Molded Inserts and Covers

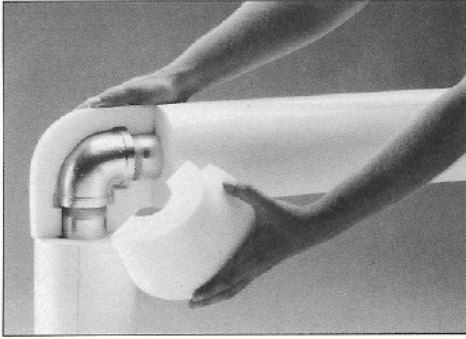

Assemble preformed fitting insert around pipe fitting, and spot tape.

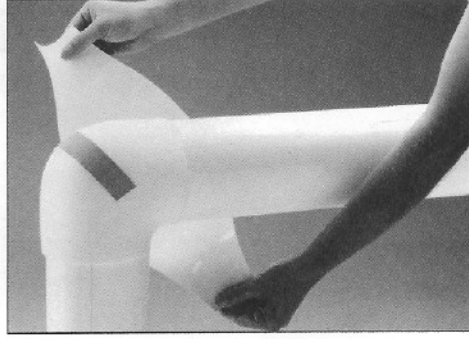


Assemble preformed fitting cover over insert and spot tape.

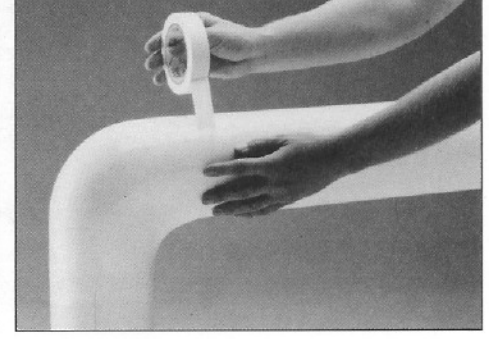


Secure fitting cover to pipe insulation permanently w/fastener weld. Butt strips may also be used for a more secure and uniform look. PVC tape can also be used for temporary sealing.


DIAPER INSERTS

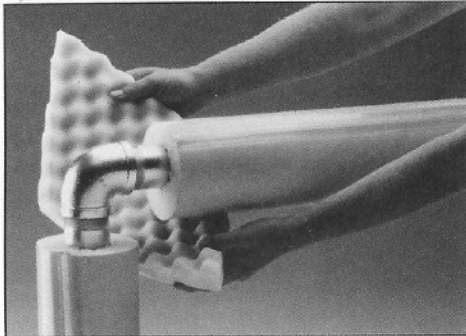

Tuck pre-cut diaper insert neatly and be sure to fill all voids and gaps.

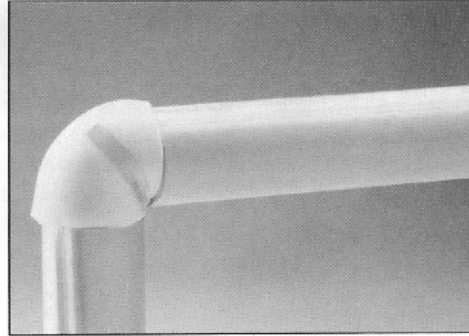

Assemble preformed fitting cover over insert and spot tape.

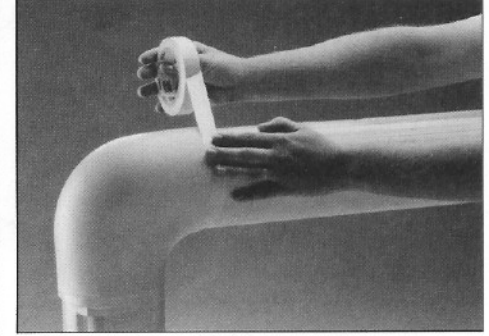

Secure fitting cover to pipe insulation permanently w/fastener weld. Butt strips may also be used for a more secure and uniform look. PVC tape can also be used for temporary sealing.

A spiral wrap is available and can be made from any of our insulation materials. When using, spirally wrap around the fitting, being sure to fill all voids and gaps.



ThermoZip Sheet Stock consists of an insulation panel laminated to a variety of protective jackets. Each sheet is designed to butt together with the jacket overlapping the adjacent sheet to insure a weather-tight joint.