


079 Quick Installation Guide

**see attached literature for complete installation instructions*


Step 1:

Position the two halves over the pipe

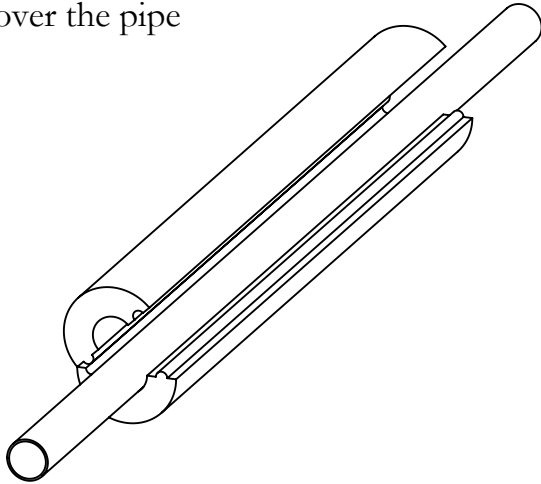


Step 2:

Spot tape insulation in place as necessary

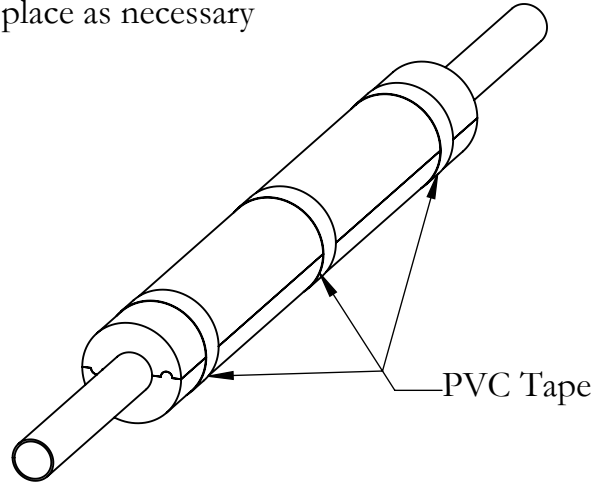


Step 3:

Position the next piece and repeat steps 1-2

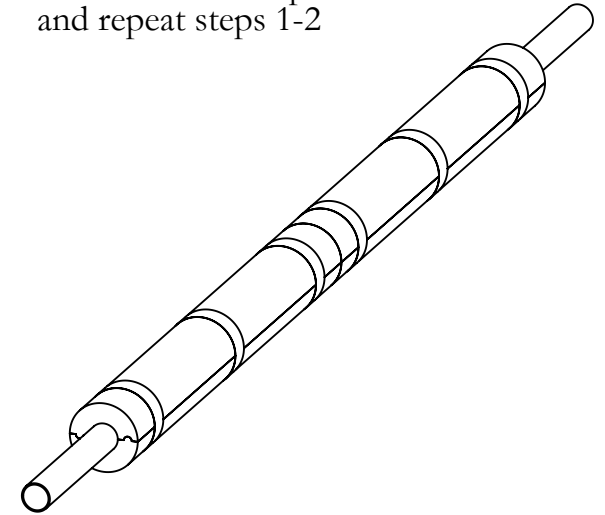


Step 4:

Install PVC field lagging following industry accepted practices and procedures

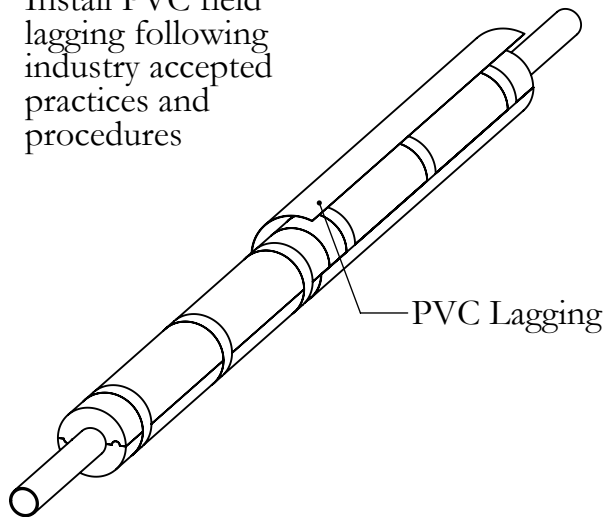

Step 5:

Repeat step 4 until all exposed insulation is covered

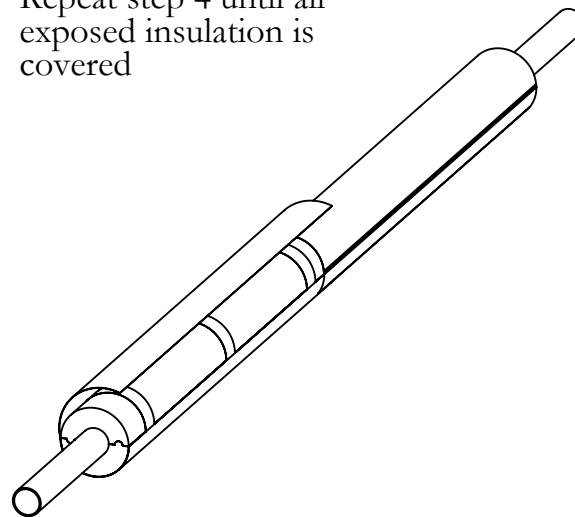

Step 6:

Fastener Weld all longitudinal and circumferential seams

