


379 Quick Installation Guide

**see attached literature for complete installation instructions*


Step 1:

Remove and discard packing material

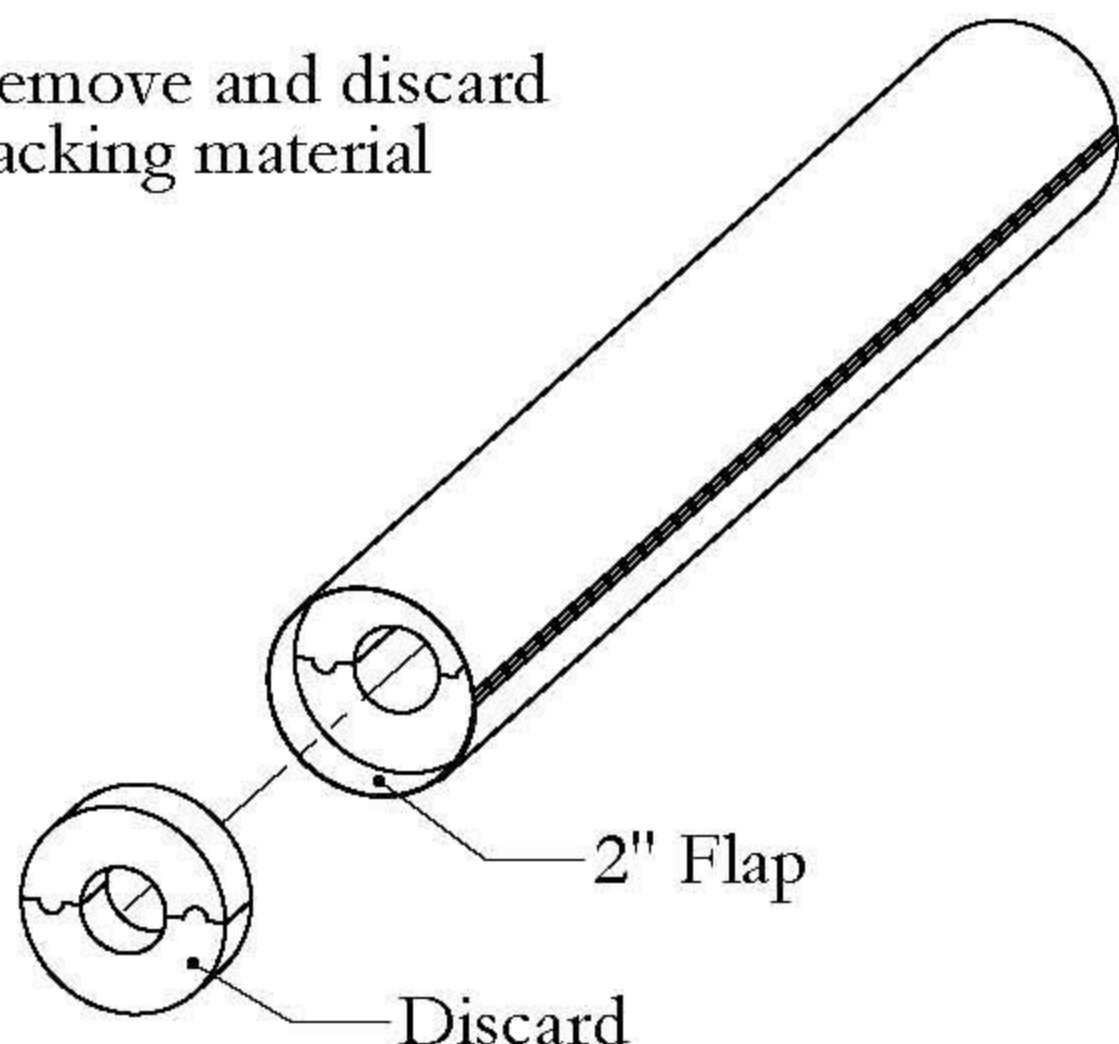


Step 2:

Position the first piece on the pipe such that the flap will shed water

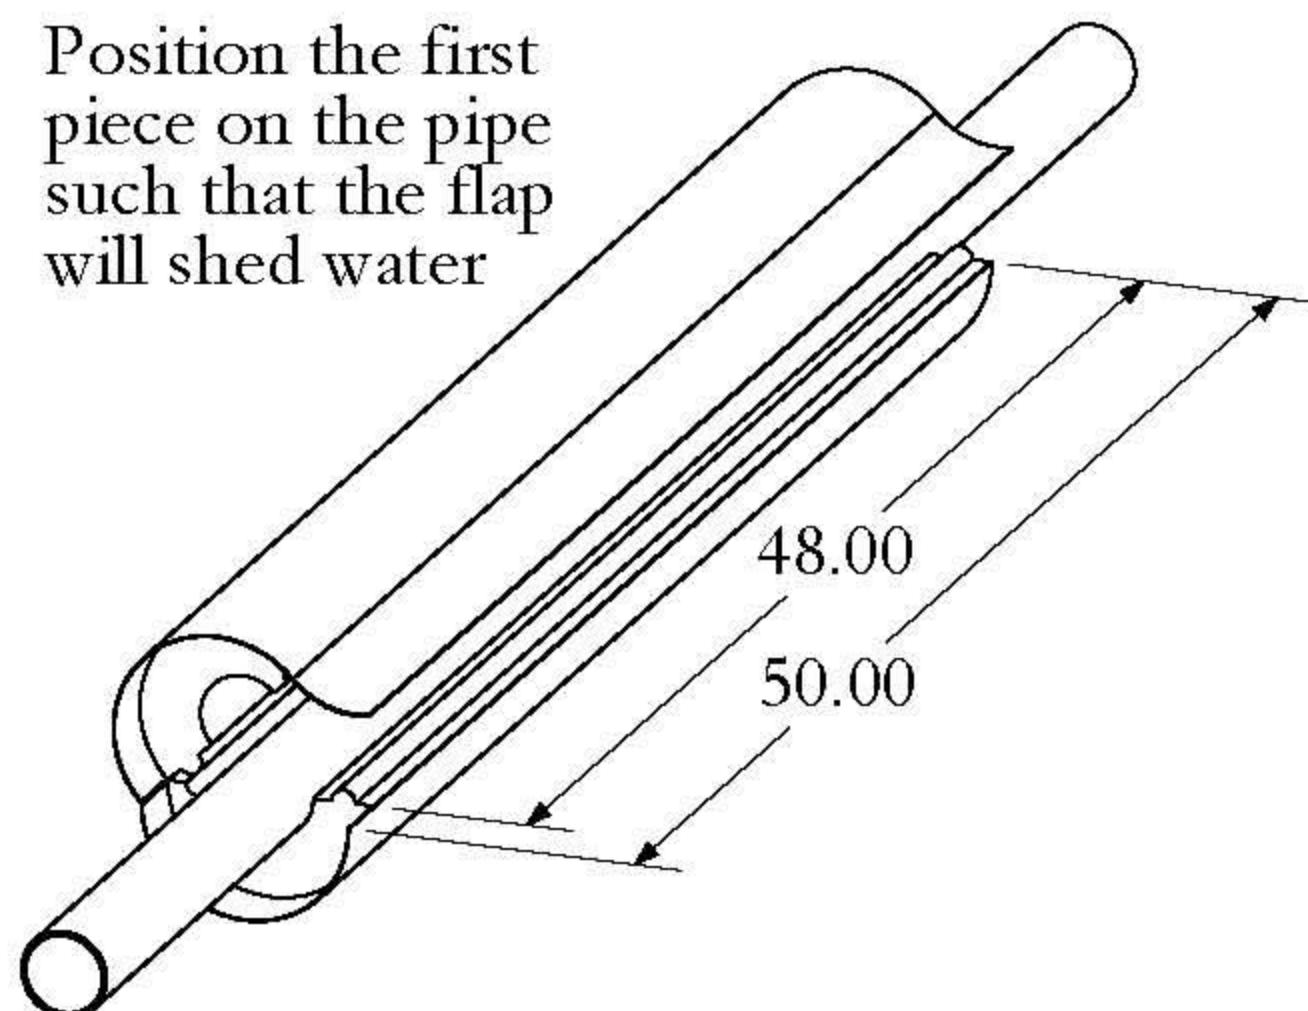


Step 3:

Remove liner from SSL flap

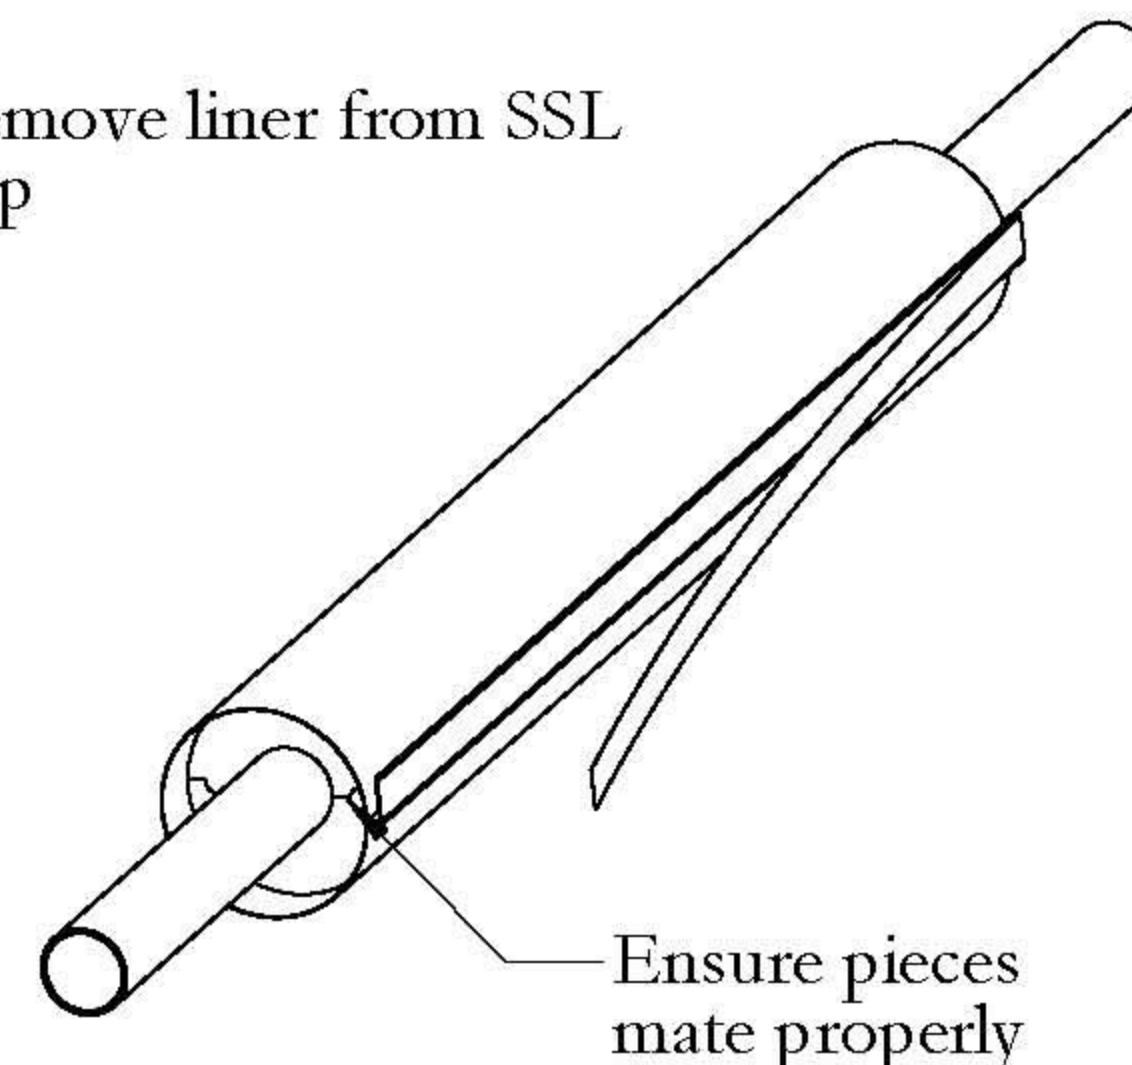


Step 4:

Beginning from the middle, press down flap and work outwards

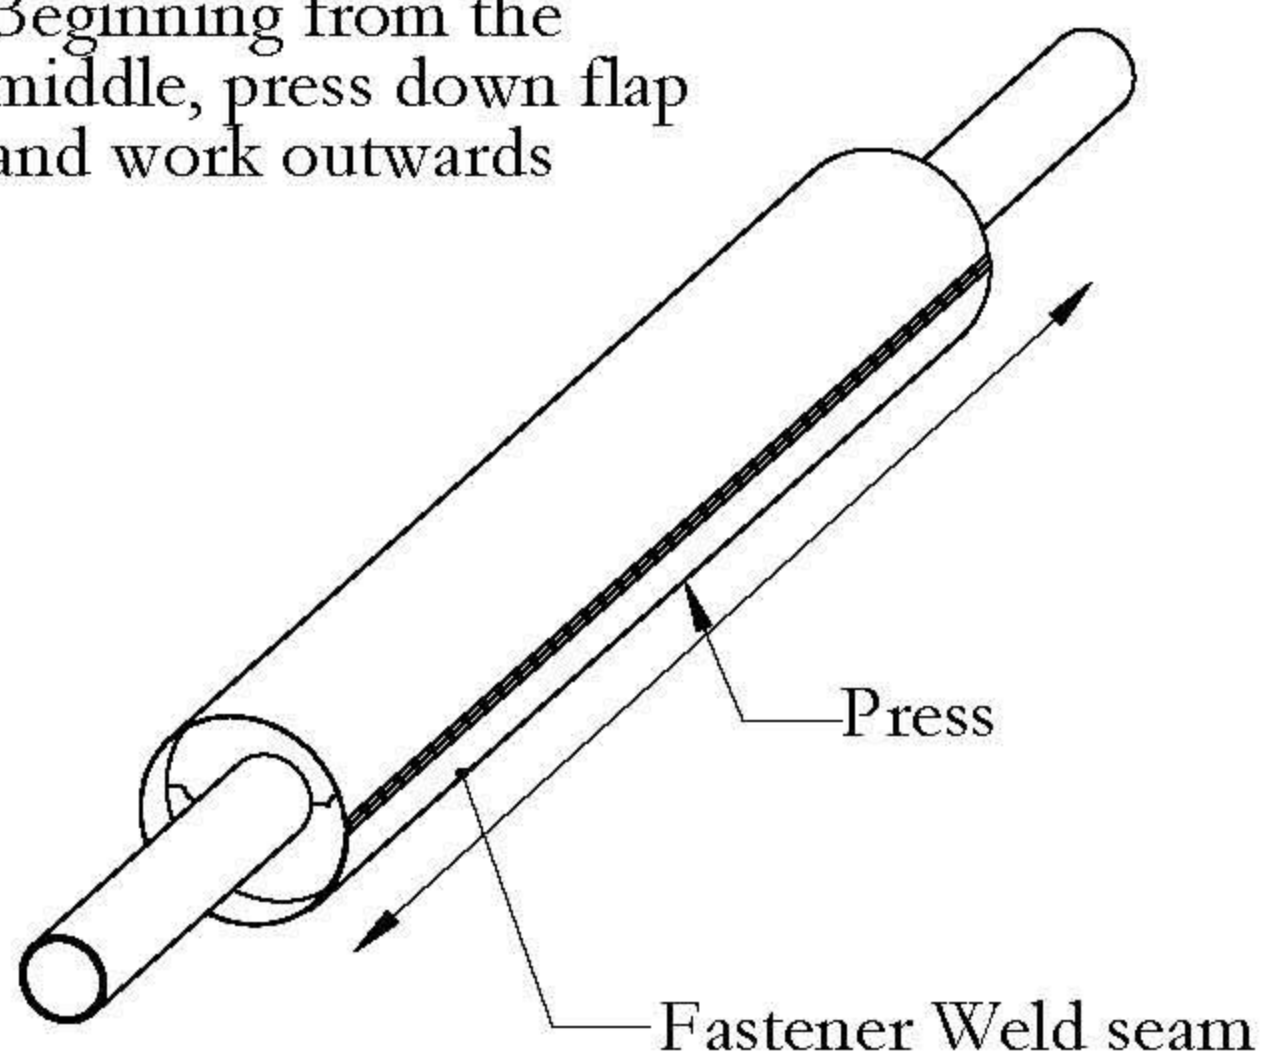

Step 5:

Position the next piece and repeat steps 1-4

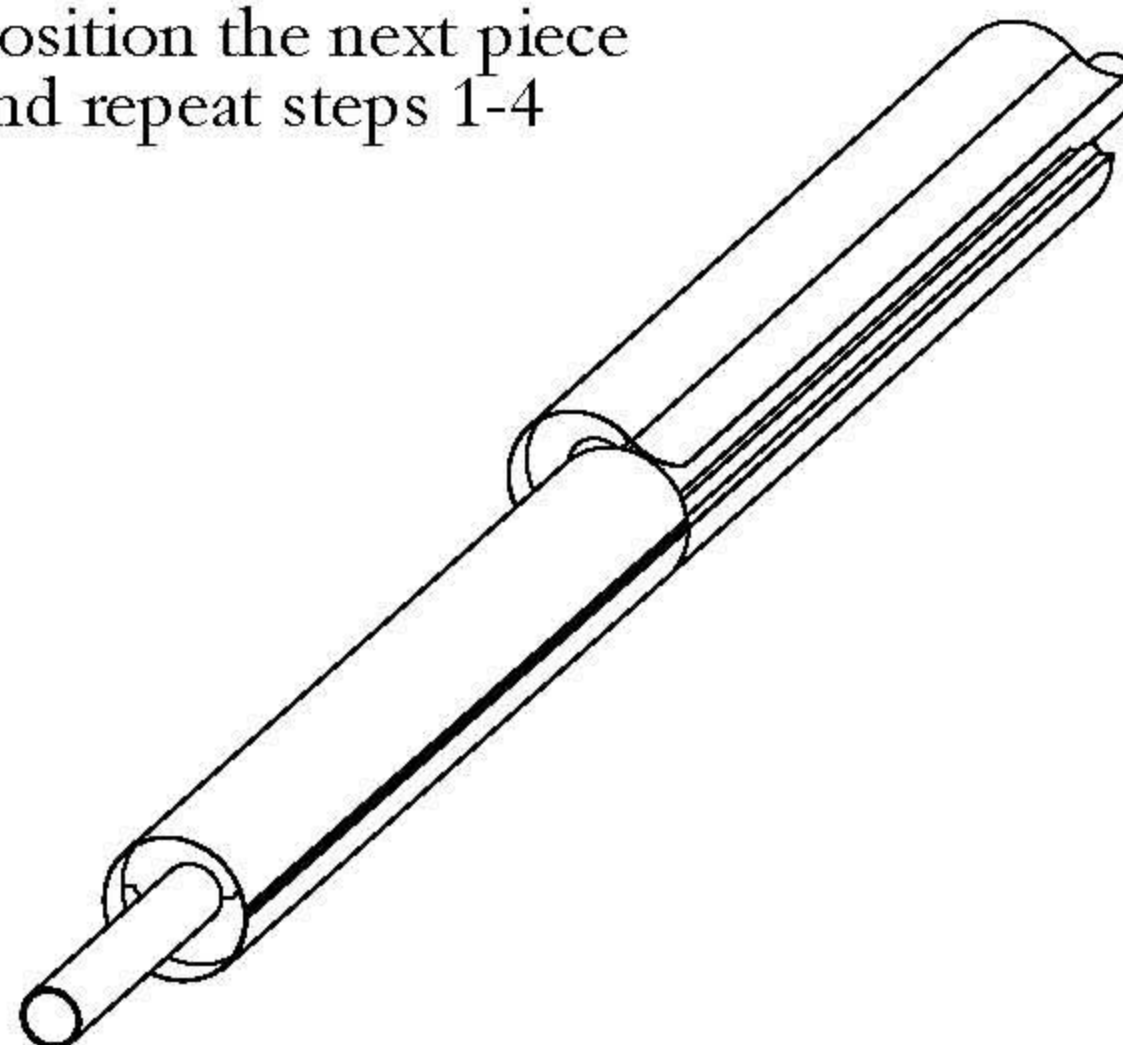

Step 6:

Fastener Weld circumferential seam

